

Quick **Z** Cards

Easy as 1, 2, 3




*This card is a reminder on how to operate the ZONO. Please read the manual before using.
Failure to follow instructions in the manual can result in serious injury or death.*

Sanitize*

1

LOAD

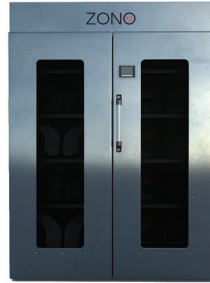

2

**REACH
INSIDE**

**PRESS
GREEN
BUTTON**



3



CLOSE DOOR

ENTER

ACCESS CODE

PRESS ENTER

**SELECT
START
SANITIZE
CYCLE**



*This card is a reminder on how to operate the ZONO. Please read the manual before using.
Failure to follow instructions in the manual can result in serious injury or death.*

Sanitize*

Easy as 1, 2, 3

1

LOAD

2

REACH INSIDE

**PRESS GREEN
BUTTON**

3

CLOSE DOOR

ENTER ACCESS CODE

PRESS ENTER


**SELECT
START SANITIZE
CYCLE**

*This card is a reminder on how to operate the ZONO. Please read the manual before using.
Failure to follow instructions in the manual can result in serious injury or death.*

Lice

1

LOAD

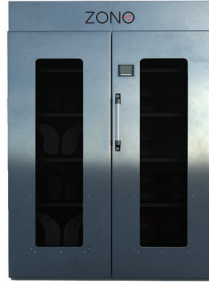

2

**REACH
INSIDE**

**PRESS
GREEN
BUTTON**



3



CLOSE DOOR

ENTER

ACCESS CODE

PRESS ENTER

**SELECT
START HEAT
CYCLE**



This will last 90 minutes.

This card is a reminder on how to operate the ZONO. Please read the manual before using. Failure to follow instructions in the manual can result in serious injury or death.

Lock

1

**REACH
INSIDE**

**PRESS
GREEN
BUTTON**



2




CLOSE DOOR

**ENTER
ACCESS CODE**

PRESS ENTER

3

**SELECT
LOCK
DOOR**

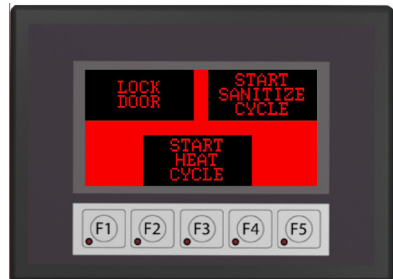

*This card is a reminder on how to operate the ZONO. Please read the manual before using.
Failure to follow instructions in the manual can result in serious injury or death.*

For any issues or questions please contact:

Bill Williams: 251-401-2064
bill@ihcsolutionsusa.com
www.ihcsolutionsusa.com



*Norovirus on non-porous surfaces. Staphylococcus Aureus, Methicillin-Resistant Staphylococcus Aureus, Escherichia Coli, Streptococcus Pneumoniae, Streptococcus Pyogenes, Shigella Dysenteriae, Salmonella Enteritidis, and Pseudomonas Aeruginosa on non-porous, semi-porous and porous surfaces.

This card is a reminder on how to operate the ZONO. Please read the manual before using. Failure to follow instructions in the manual can result in serious injury or death.